

1. Stop the engine
2. (Optional, not needed) Press the disable intrusion/ tilt sensor button
3. Get everyone out of the car, except the driver
4. Lock all doors using the button on the driver's door
5. Get out of the car
6. Manually move the driver's door lock into the lock position
7. [!] Do not leave your key inside
8. While holding the driver's door handle in the open position, close the driver door
9. The car will be mechanically locked, but with the alarm and sensors disengaged