

TOYOTA
82541-60180
110600-1370
DENSO
MADE IN JAPAN

P
09E17
2146

·30·
·30·
·7.5·
·10·
·10·
·10·

·15·
·15·
·15·
·10·
·20·
·10·

·25·
·25·
·20·
·20·
·30·

140A
1957-3M ABI

·15·
·02·
·52·
·02·
·10·
·15·
·30·
·10·

·15·
·15·
·10·
·15·
·15·
·10·
·10·

·30·
·10·
·25·
·10·
·15·
·25·
·10·
·25·

80A
50A
40
50
50A
30
30
50

10
15
25

10
15
25

50A
50A

50
0E
05

DENSO
DENSO
DENSO
DENSO

注意 NOTICE

YBELOMTEHNE

指定のヒューズ以外は使用しないでください。
 • USE THE DESIGNATED FUSES ONLY.
 • UTILISEZ SEULEMENT LES FUSIBLES DESIGNES.
 • 只能使用指定的保险丝。
 • ИСПОЛБЗЫТЕ ТОЛЬКО ПРЕДПРАНИТЕНН
 YKASAHOTO HOMHANA.

82662-60A61



NOISE FILTER

15A INV	25A D/L NO.2
15A TI&TE	25A GAS HTR
15A MIR HTR	20A S/HTR RR
10A STOP	30A PFS RH
20A DEICER	20A CDS FAN
10A A/C COMP	30A DEF
30A PFS LH	30A HWD NO.3
50A AIR SUS	30A HWD NO.4
140A ALT	

30A HWD NO.1	50A HTR
30A HWD NO.2	50A PTC HTR NO.1
50A PTC HTR NO.2	30A H/L CLN
40A A/C RR	50A PTC HTR NO.3

30A DCU NO.1	7.5A WIP FR NO.2
30A DCU NO.2	10A EFI NO.2
	10A WIP FR NO.3
	10A NOx RR PM
DCU	
HWD NO.4	HWD NO.3

ST

SPARE SPARE SPARE

HORN	H-LP RH-LO
A/C COMP	DEICER

S-HORN	DEF
H-LP RH-HI	H-LP LH-HI

15A NOx PM
20A EFI MAIN NO.2
25A EFI MAIN NO.1
20A IG2
10A DRL
15A FUEL PMP
30A EDU
10A VISC HTR

7.5A AIR SUS NO.2	30A TOWING BRK
15A H-LP LH	10A HORN
15A H-LP RH	25A H-LP HI
10A NOx FR	10A S-HORN NO.2
10A IG2 NO.2	10A S-HORN
15A H-LP LH-LO	15A STRG LOCK
15A H-LP RH-LO	25A H-LP LO
10A EFI MAIN NO.3	10A FOG FR
10A DOME	25A D/L NO.1
10A ECU-B	10A WSH NZL HTR
	SHORT PIN

80A GLOW
50A DCU
40A ST
50A J/B-B
30A TOWING
30A ABS NO.2
50A ABS NO.1
H-LP LH/
H-LP LH-LO

GLOW

注意 NOTICE УВЕДОМЛЕНИЕ

- 指定のヒューズ以外は使用しないでください。
- USE THE DESIGNATED FUSES ONLY.
- UTILISEZ SEULEMENT LES FUSIBLES DESIGNES.
- 只能使用指定的保險絲。
- ИСПОЛЬЗУЙТЕ ТОЛЬКО ПРЕДОХРАНИТЕЛИ УКАЗАННОГО НОМИНАЛА.

10A TAIL	7.5A DCM	
7.5A PANEL	10A RAD NO.3	
10A IGN	7.5A SMART	25A DOOR P
10A IGN NO.2	20A RAD NO.1	30A P/SEAT F/L
7.5A METER	15A HAZ	
20A AVS	10A 4WD-B	
10A KDSS	10A COOLING	
20A 4WD	10A ECU-IG NO.3	
10A A/BAG IG2	15A WIP RR	
10A S IG2		
10A HTR FR		
20A WASHER		
30A DOOR P		
25A DOOR R/R		
10A IG1	15A P/OUTLET	
10A ESP NO.1	7.5A ACC	

LI

7.5A PANEL	10A RAD NO.1	
10A IGN	7.5A RAD NO.2	
10A IGN NO.1		
7.5A METER		
		30A P/SEAT F/R
		30A WIPER
	15A RAD NO.2	30A AMP
	15A WIP RR	20A S/HTR FR
7.5A FOG RR	25A DOOR D	20A WASHER
	25A S/ROOF	
7.5A AMI	10A TOWING BKUP	30A DOOR P
10A STRG HTR	10A BKUP LP	
7.5A OBD	10A ECU-IG NO.2	25A DOOR R/R
7.5A A/C	10A IG1	15A P/OUTLET
10A DOOR B	10A ECU-IG NO.1	7.5A ACC

LI